



From **DSC®**

Power Series V4.2 Can Now Arm or Disarm Multiple Partitions with a Single Function Button

Global Arming/Disarming Function Keys

There are five function keys on the Power Series keypads labeled Stay, Away, Chime, Reset and Exit. The operation of these keys can be reprogrammed in section [000], subsection [1] thru [5] for function buttons 1 thru 5, respectively. When the function button below is pressed and a valid access code is then entered, all partitions assigned to that access code will perform the function.

[15] - Global Stay Arming

[18] - Global Away Arming

[22] – Global Disarming

PK5500 Global Status Screen

Unlike a partition keypad, a global keypad is not assigned to a single partition. Rather, a global keypad can be used to easily access multiple partitions on the system. Global keypads should be placed in common or global areas of the premises, such as common lobbies or reception areas, where the ability to arm, disarm, or view more than one partition is required. Any Power Series keypad can be programmed as global in programming section [000][0] or, temporarily loaned to global mode by pressing and holding the [#] key.

To select one of the partitions on a Global Keypad simply press and hold the desired partition number (*i.e., press and hold [1] to select partition 1, press and hold [2] to select partition 2, etc.*). The keypad will then display the status of the selected partition and allow normal operation.

When a PK5500 or RFK5500 keypad is programmed as Global you will see a Global Partition Status screen. This shows basic status for all 8 partitions. The screen looks similar to the example shown below.

```

1 2 3 4 5 6 7 8
A R ! N - - - -

```

Each partition is identified by a number. Below each number is the current status of that partition.

- A Partition is Armed
- N Partition is Not Ready to Arm
- R Partition is Ready to Arm
- ! Partition is in Alarm
- Partition is Not Enabled