



# DID YOU KNOW SALES TIPS

From **DSC®**

Auto-Arming can be programmed for a time of day or when there is no zone activity

The New Power Series panels supports two types of auto-arming: 1) at a specific time of day (*each day could be a different time*), or: 2) when there has been no zone activity after a programmable amount of time.

### Auto Arming via schedule

#### **Step 1** – Enable Auto Arming on a Partition Keypad

Press [\*][6], followed by the Master Code. 6 short beeps should be heard on the keypad and you should be in User Functions. Press [2]. 6 short beeps should be heard on the keypad as Auto Arming is now enabled.

#### **Step 2** – Program (*per day of the week*) the scheduled time

Remain in User Functions. If you exited User Functions, enter User Functions again by pressing [\*][6] [Master Code]. Enter [3] to change the Auto Arm time for each day of the week. Scroll (*using the PK5500 keypad*) to the day of the week you want to change, or enter the number of the day (*1-7 for Sunday thru Saturday*). When you have selected a day, enter the Auto-Arm Time in 24-hour format (*i.e., enter a 4-digit number in [hh:mm] format*).

The system will return you to the day selection menu. Select another day you want to program, or to exit auto-arm programming, press [#].

#### **Step 3 (Optional)** – Auto Arm Postpone Timer

If you do not want auto arming cancelled when an access code is entered during the Auto Arm pre-alert, the partition can attempt to Auto Arm again after a programmable time. Program the Auto Arm Postpone Timer in Section [175]. Valid entries are 001 – 255 minutes. This entry is for all partitions.

### Auto Arming via No Zone Activity

The No Activity Arming Timer will begin when a delay type zone is restored (*i.e., the customer leaves*). The No Activity Timer is stopped if any zone is tripped or restored (*i.e., someone is still in the home*). The timer will only restart when a delay type zone is restored again (*i.e., the second person leaves*). The system will only arm if the No Activity Arming expires AND no other zones were violated in that time (*i.e., no one is home*).

#### **Step 1** – Enable Auto Arming on a Partition Keypad

Press [\*][6], followed by the Master Code. 6 short beeps should be heard on the keypad and you should be in User Functions. Press [2]. 6 short beeps should be heard on the keypad as Auto Arming is now enabled.

#### **Step 2** – Program No Activity Arming Timer

Enter [\*][8] Installer Programming. Program the No Activity Arming Timer in Section [191] – [198] for Partitions 1 - 8. Valid entries are 001 – 255 minutes.