



**DID YOU KNOW
SALES TIPS**

From **DSC®**

The New Power Series V4.2 Now Supports Automatic Disarming

The Power Series can now automatically disarm any partition on a programmable schedule. Each separate partition can be programmed to disarm automatically. Furthermore, each day of the week can have a separate auto-disarm time. To prevent an unwanted disarming during a holiday, each partition can have up to 14 separate auto-disarm holidays where auto disarming will not occur. To program the Power Series control panels to automatically disarm, follow the steps below:

PC1616/PC1832/PC1864:

Step 1 – Enable Auto Arming/Disarming on a Partition Keypad

Press [*][6], followed by the Master Code. 6 short beeps should be heard on the keypad and you should be in User Functions. Press [2]. 6 short beeps should be heard on the keypad as Auto Arming/Disarming is now enabled.

Step 2 –Auto Disarm time

Enter [*][8] Installer Programming. Program the Auto Disarm Time in Section [681] – [688] for partitions 1 – 8. Each section has 7 entries for Sundays thru Saturday Auto-Disarm time. Enter the Auto-Disarm Time in 24-hour format (i.e. enter a 4 digit number in [HH:MM] format, or [99:99] to disable auto disarming for a day).

Step 3 (Optional) – Auto Disarm Holiday Schedule

Program the Auto Disarm Holiday Schedule for each day that the system will skip auto-disarm for each partition in Section [611] – [698] for partitions 1 – 8. Each section has 14 entries. Enter the Auto-Disarm Time in Month, Day, Year format (i.e. enter a 6-digit number in [MM:DD:YY] format). Enter [99][99][99] to disable a holiday.